 


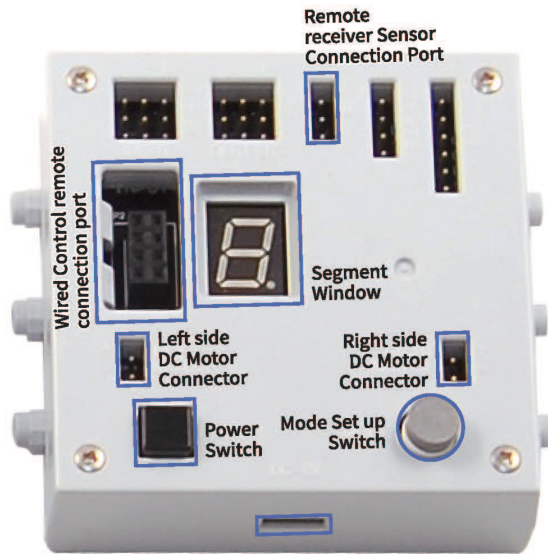

MAIN BOARD 8M Connection Method and Set up

 


Segment Window

Window for current mode and remote control set up



Remote Receiver Sensor Connection(F, 7 MODE)

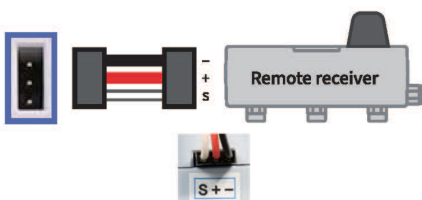

Motor Connection



IR SENSOR (C MODE)



 
Main board operating mode(ID) set up method

- 1** Push the Power Switch.
Power On.
- 2** Push the Mode Set Up Switch.
Mode Changed.
- 3** Stop at the mode you want to select.
Segment display blinks 3 times.
- 4** Mode Setup complete.
Complete.

Main board channel set up method

- 1** Turn off using the Power Switch.
- 2** Turn on with the Power switch while holding the mode switch.
- 3** The number on the display represents the current channel.
- 4** Push the mode switch again to change the channel.
- 5** The channel will set after waiting 2 seconds.
→ Channel setting complete after the display blinks.


Wired Remote controller

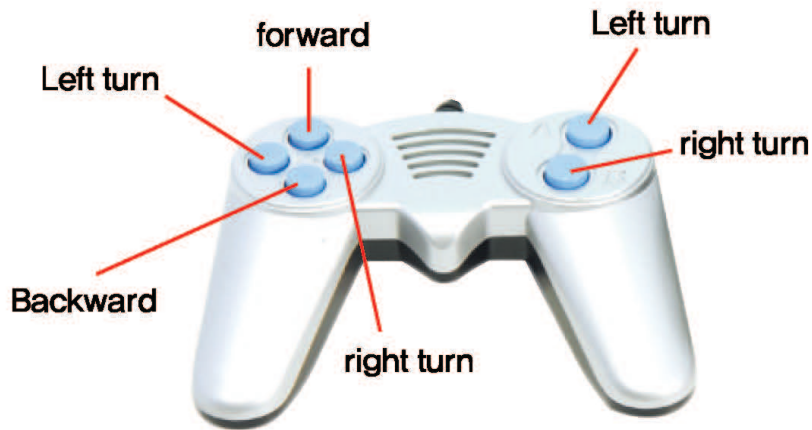

SEPARATING TOOL MANUAL

Example 1

 Match the holes in the tool with the stub in the cells to disassemble

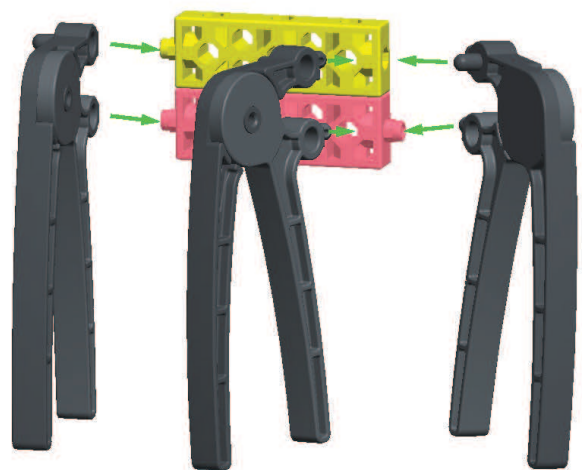

Example 1

Example 2

Example 3


Example 2

Match the stubs in the tool with the holes in the cells to disassemble

Example 3

Match the holes and stubs in the tool to the cells to disassemble

 wireless remote controller

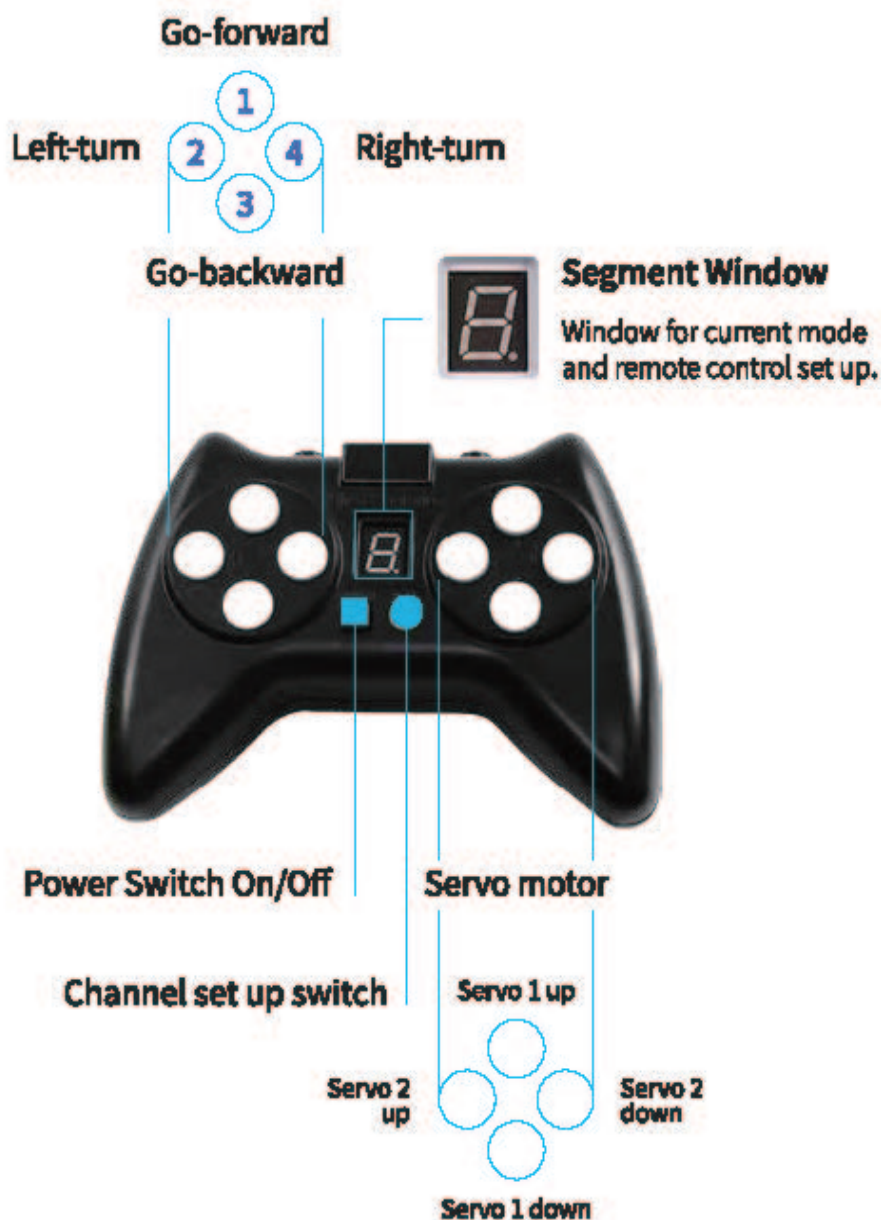

- 1** Turn off using the Power switch
- 2** Turn on with the Power switch while holding the mode switch
- 3** The number on the display represents the current channel.
- 4** While holding the mode buttons, press 1 or 3 button to change the mode.
- 5** press 4 button to save the mode.




Service Bot




Service Bot parts list | Let's build this model

Diamond H8 (2)	Diamond H6 (1)	Diamond V8 (2)	Diamond V6 (2)	Rubi 8 (6)	Rubi 8 (2)	Rubi 7 (3)	Rubi 6 (7)	Rubi 4 (4)	Rubi 2 (2)	Rubi 0 (8)	Mini 2 (6)	Mini 2 (5)
Curve (2)	Curve (2)	Link (8)	Sawtooth 36 (7)	Sawtooth 24 (2)	Sawtooth 12 (2)	Short Connector (2)	Middle Connector (8)	Off-road Wheel (2)	A23 (2)	A45 (5)	A64 (2)	6V Battery Case (1)
Main board 8M (1)	Connector Jack (1)	DC Motor (2)	wired remote controller(1)									

 1 ★★★

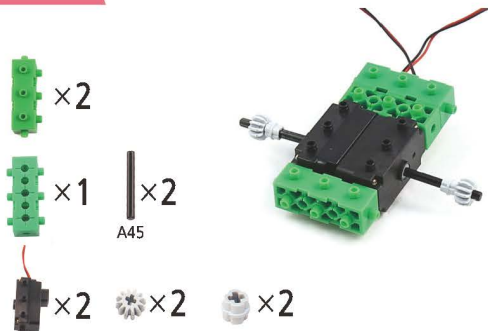


2 ★★★

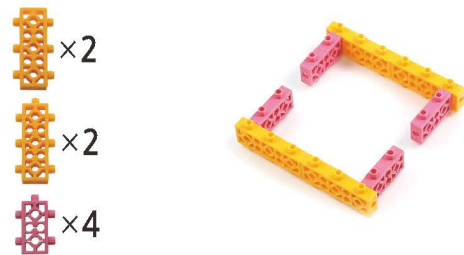 


3 ★★★

 
3-1

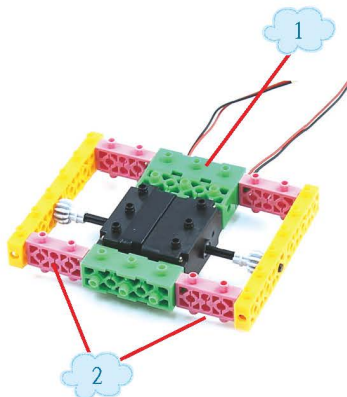


3-3

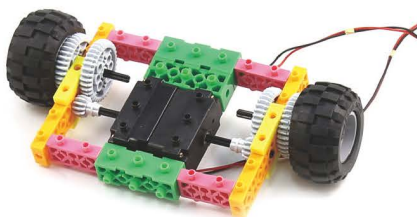 

3-2

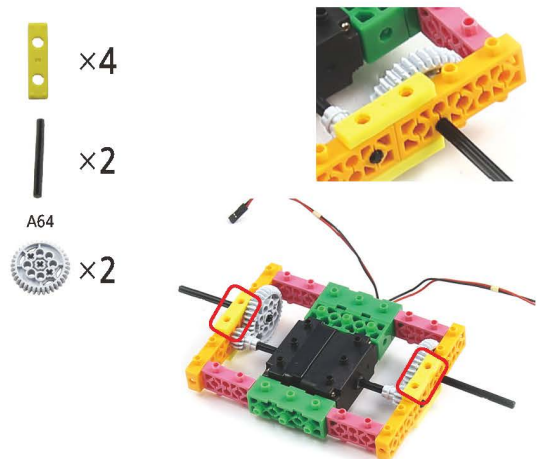 


3-4

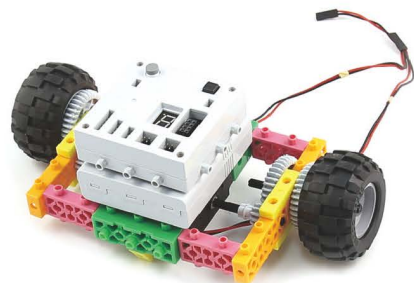 

4 ★★★


4-1

  ×2
 ×2
 ×1

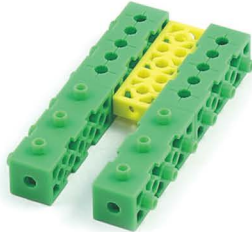


4-2

  ×2
 ×5
 ×1

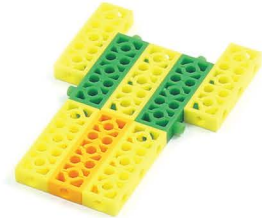

4-3

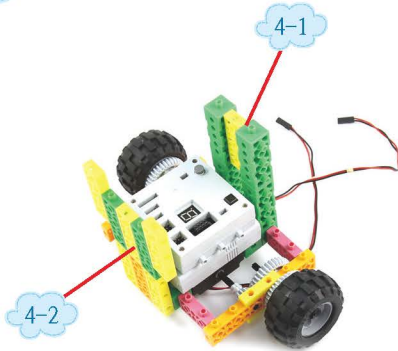 

5 ★★★

 
5-1



 ×2
  ×2
  ×2
  ×2
 ×2
 ×2


5-3

 ×2
 ×2
 ×2

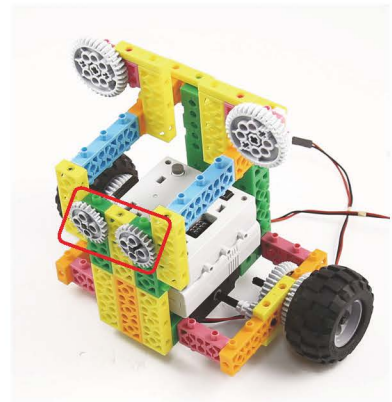

5-2

 
 ×2
 ×2
 ×2

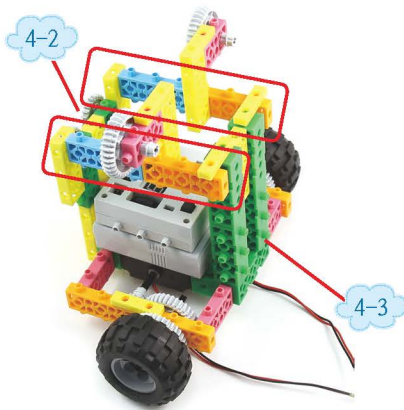


6***

6-1

  ×2
 ×1
 ×2

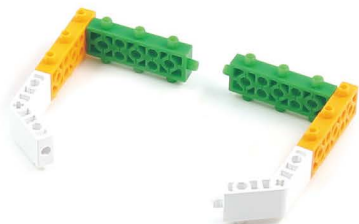

6-2

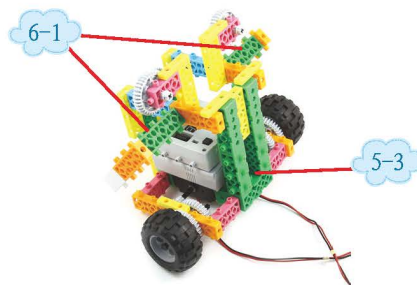 

7***

7-1

 ×1
 ×2
 ×2
 ×1
 ×1
 ×1
 ×1
 ×2



 
7-2

 ×2
 ×4



7-3

complete

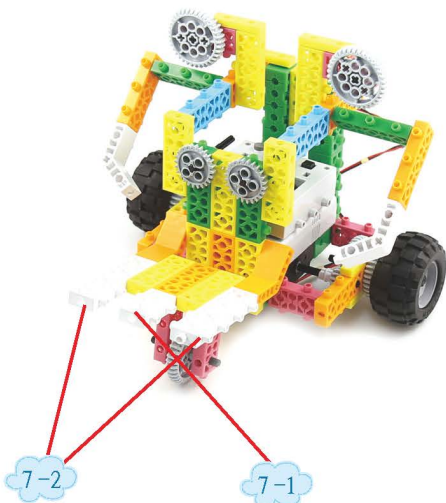

 ×2
 ×2



Mode
F